



# THE BLENDER DAILY MIX

—  
User manual

frifri<sup>★</sup>.BE



Congratulations! You are the happy owner of a new mixer: THE blender DAILY MIX from Frifri. Carefully read the user manual before using the appliance and keep it in order to consult later if needed.



## SAFETY PRESCRIPTIONS

- This appliance may not be used by persons (including children under the age of 8) whose physical, sensorial or mental capacities are reduced, nor by persons lacking experience or knowledge, except when having received supervision or instructions from another person responsible for their security about the use of this appliance in advance
- Maintenance and cleaning of the appliance may never be done by children. Keep the appliance and the electrical cord out of reach of children under the age of 16
- There is a risk of injuries when the appliance is used incorrectly
- Never operate the appliance unattended or let it plugged in when not in use
- This appliance is meant for household use, not professional. The manufacturer declines all responsibility in case of accidents that occurred because of inappropriate use of the appliance or if it is not used as prescribed in the user manual
- Before plugging in the appliance, check if the voltage indicated on the appliance matches the mains voltage of your house
- Make sure your hands are dry before unplugging the appliance
- Turn off and unplug the appliance before changing accessories
- Carefully handle the sharp blades while putting them into place or cleaning
- Carefully assemble the blades on the cup in order to avoid leaks
- Never assemble the blades on the base of the appliance without the cups
- Never add hot ingredients (above 65°C) in the cups
- Remember to remove the seeds of the fruit before mixing
- Completely unroll the electrical cord
- Do not pull the electrical cord to remove the plug from the socket, but hold the plug and turn off the appliance
- Keep the electrical cord away from sharp edges, hot surfaces or other heating sources
- Never place your appliance on hot surfaces or near a flame
- Never use the appliance if the electrical cord is damaged
- For your own safety, only use accessories and parts suited for your appliance. All repairs must be executed by a company authorised by the manufacturer or its after sales service (see information at the end of this document). Do not try to open the motor unit or to repair the appliance yourself
- When overheated, the safety system will stop the motor. Turn off the appliance and wait for the motor to cool down completely
- This appliance is not meant to be used with separate timers or a remote control
- Never immerse the appliance nor the electrical cord in water or any other fluid
- Place the appliance on a flat dry surface
- Never place the appliance on another appliance
- Never put any part of the appliance in the microwave oven
- For your own safety it is recommended never to use or store the appliance outside or on places exposed to weather conditions or humidity
- Only use this appliance for what it is intended

# DESCRIPTION OF THE APPLIANCE



## Technical features

- Power : 1000 Watts
- Voltage : 220-240V ~ 50/60Hz




CROSS BLADES  
FOR HARD INGREDIENTS

BLADE BASE

MOTOR UNIT

TOUCH CONTROL  
PANEL



NON-SKID  
FEET

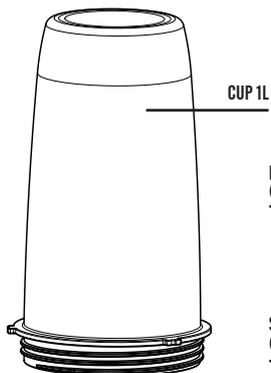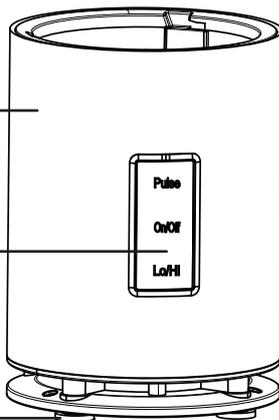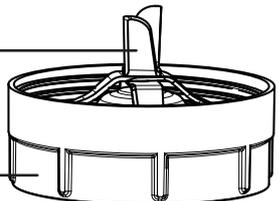

CUP 1L


DRINKING LID  
(OR POURING LID) (X1)

 STORAGE LID  
(OR FRESH LID) (X2)

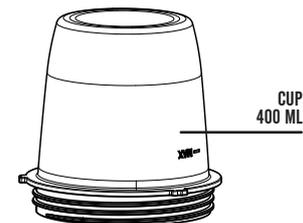

CUP  
400 ML

 FLAT BLADES  
FOR SOFT  
INGREDIENTS



BLADE  
BASE


## PUTTING INTO SERVICE & USE
 
### BEFORE THE FIRST USE

- Check if all parts and accessories are present and don't show any defects
- Make sure all packaging material is removed
- Thoroughly clean all accessories (except the motor unit) in warm soapy water. Carefully rinse and dry
- The parts (except the motor unit) are dishwasher proof (under 65°C)

### USE OF THE BLENDER DAILY MIX

- Make sure the appliance is unplugged when assembling
- Place the motor unit on a stable and solid surface
- Fill the selected cup with ingredients without exceeding the MAX-level
- Fix the selected blades on the selected cup depending on your needs (cross blades to mix and the flat blades to blend) by turning the blade base clockwise
- Place the filled cup on the motor unit and fix it by turning it clockwise on the base. Make sure the cup is stable and correctly fixed



*Careful : this appliance is equipped with a safety lock on the motor unit (A). If the blade base is not correctly fixed, the safety lock will not engage and therefore, the appliance will not function. Do not use tools to engage the safety lock.*

- Plug the appliance in the socket: the “On/Off” will blink
- Press the “On/Off” button to start the appliance: the digital panel lights up
- Set the speed:
  - Press once on the ‘Lo/Hi’ button: standard speed
  - Press twice on the ‘Lo/Hi’ button: high speed
  - In both cases the program will stop after 60 seconds
- Pulse function: Press the ‘Pulse’ button for high speed for 2 seconds
- Turn the appliance off by pushing on the ‘On/Off’ button, pull the plug from the socket

### INSTRUCTIONS FOR USE

- Cut the solid ingredients in pieces before mixing them
- Add some liquid if you want to mix only dry ingredients
- After 60 seconds of continuous use, the program will automatically stop. Allow the appliance to cool down after 5 times continuous use and wait for approximately 5 minutes before reusing it in order to avoid overheating
- Do not put any hard objects in the cups, this could damage the blades. Remove seeds of the fruit before mixing
- For the chopper: don't use more than 120 gr of ingredients
- The ‘Pulse’ function can be used to make crushed ice

### MAINTENANCE

- Turn the appliance off and pull the plug from the socket before disassembling and cleaning it

• Never immerse the motor unit in water, or never put it in the dish washer. Clean it with a soft cloth or sponge and dry carefully

• The blades and cups can be washed in soapy water, rinsed with clear water and carefully dried

• The blades and cups are dishwasher proof providing the temperature doesn't exceed 60°C

• You can also put some clean water and detergent in a cup and use the ‘Pulse’ function to help you cleaning the cups

### ENVIRONMENT

• For your safety this appliance has been built in accordance with the European CE safety standards and is compliant with the general recognized standards and prescriptions with regard to the safety of electrical appliances. As for all electrical appliance, the necessary precautions need to be taken in order to avoid accidents or damages

• Let's participate in the protection of the environment! Electrical appliances cannot in any way be disposed in a public waste bin or with normal domestic waste, but they must be brought to an official collection centre for recycling of electric and electronic appliances. For more information on the collection centres for recycling of appliances at the end of their lifetime, please contact the local authorities in your area, the household waste disposal service provider or the store where you bought your appliance



## WARRANTY

Dalcq S.A. provides a special warranty on all parts of the appliance subject to conditions below. The legal regulations about warranty as well as the rights resulting from the legislation about responsibility of the defective products remain unaffected. Possible right to reimbursement of the buyer in case of defaults remain valid, if the conditions below are met.

### 1. PERIOD OF THE WARRANTY

The warranty applies to all parts of the appliance and starts from the date of purchase (date of invoice) of the appliance and has a duration of 2 years when used privately.

### 2. OBJECT OF THE WARRANTY

Dalcq S.A. covers the material, construction and manufacturing defaults, provided the default was present at delivery and that the appliance was correctly operated by the buyer. The warranty covers free of charge repair, or exchange of one or more defective components, or the exchange of the appliance for another appliance of the same value. It is up to Dalcq S.A. to decide which measure to undertake.

### 3. WARRANTY CASE

When breakdown/default, you must immediately advise :

- The store where you bought the appliance
- The after sales service (written or via email) that the appliance will be returned, to provide an extended description of the problem with pictures

### 4. PACKAGING

It is recommended to use the original packaging to return the appliance. If you use a different packaging, make sure it provides enough protection for typical transport risks and that it offers sufficient protection. A simple cardboard box filled with paper is not sufficient. Dalcq S.A. cannot be held responsible for damage resulting from insufficient packaging. The warranty then expires. The after sales service will inform you of the return procedure as well as of the costs this implies.

### 5. CLEANING

If you don't clean the parts or the appliance before returning it, Dalcq S.A. will invoice a cleaning set rate. It is the responsibility of the buyer to prove the real costs of cleaning are inferior to the invoiced set rate.

### 6. WITHDRAWAL OF THE RIGHT TO WARRANTY

The right to warranty is withdrawn by :

- Incorrect use, treatment and storage. (for example, defaults caused by humidity, high temperatures)
- Repairs, repair attempts, modifications of any kind and use of non-original parts, etc. which were not executed by Dalcq S.A. or by an authorized company
- Insufficient packaging and bad transport
- Inappropriate mechanical influences on the appliance or on the parts of the appliance
- Defaults that are not caused by the finishing or production of the appliance, such as fall, collision, damage, fire, earthquake, damage by flood, lightning, etc
- Use other than household use, especially in a commercial environment

- The costs incurred by Dalcq S.A. because of the returning of the appliance by the buyer, without warranty or right to restitution will be for the buyer



### 7. AFTER SALES SERVICE

Dalcq S.A.

Rue du Hainaut 86 - 6180 Courcelles  
Belgium

support@dalcq.com

frifri.BE