



THE RACLETTE

User manual

fri*fri[®].be



Congratulations! You are the happy owner of a new raclette appliance from Frifri.
Carefully read the user manual before using the appliance and keep it in order to consult later if needed.



SAFETY PRESCRIPTIONS

- This appliance shall not be used by persons (including children under the age of 8) whose physical, sensorial or mental capacities are reduced, nor by persons lacking experience or knowledge, except when having received supervision or instructions from another person responsible for their safety about the use of this appliance in advance
- Maintenance and cleaning of the appliance cannot be carried out by children
- Keep the appliance and the electrical cord out of reach of children under the age of 16
- Never operate the appliance unattended
- This appliance is designed to be used domestically. The manufacturer declines all responsibility for all accidents caused by an incorrect use of the appliance or if it is not used as prescribed in this user manual
- Before plugging in the appliance, check if the voltage indicated on the appliance matches the mains voltage of your house
- Always completely unroll the electrical cord
- Never pull the electrical cord to unplug the appliance, but hold the socket
- Keep the electrical cord away from sharp edges, hot surfaces or other heat sources
- Never place the appliance on a hot surface or close to a flame
- If your appliance or its electrical cord are damaged, never use it and contact the after sales service
- For your own safety, only use accessories and parts adapted to your appliance. All repairs must be executed by a center certified by the manufacturer or its after sales service. (see coordinates at the end of this document)
- Never let the appliance plugged in when not in use
- Never use separate timers or remote controls
- Never immerse your appliance in water or any other liquid
- Never touch the hot parts of the appliance while operating
- Never move the appliance when it is hot
- Be careful with oil on the appliance, since oil is very inflammable
- Allow the appliance to cool down before cleaning it
- Place the appliance on a flat and dry surface
- Never use the appliance in a confined area
- Never place the appliance on another appliance
- Never put any of the parts of the appliance in the microwave oven
- For your safety, it is recommended never to use your appliance outside or on a place exposed to humidity or weather conditions
- Always use the appliance for what it is intended

DESCRIPTION OF THE APPLIANCE



Technical features


- 8 persons
- Reversible aluminum baking plate with non-stick coating
- 1300 Watts
- 230 Volts-50Hz



8 WOODEN SPATULAS



8 PANS

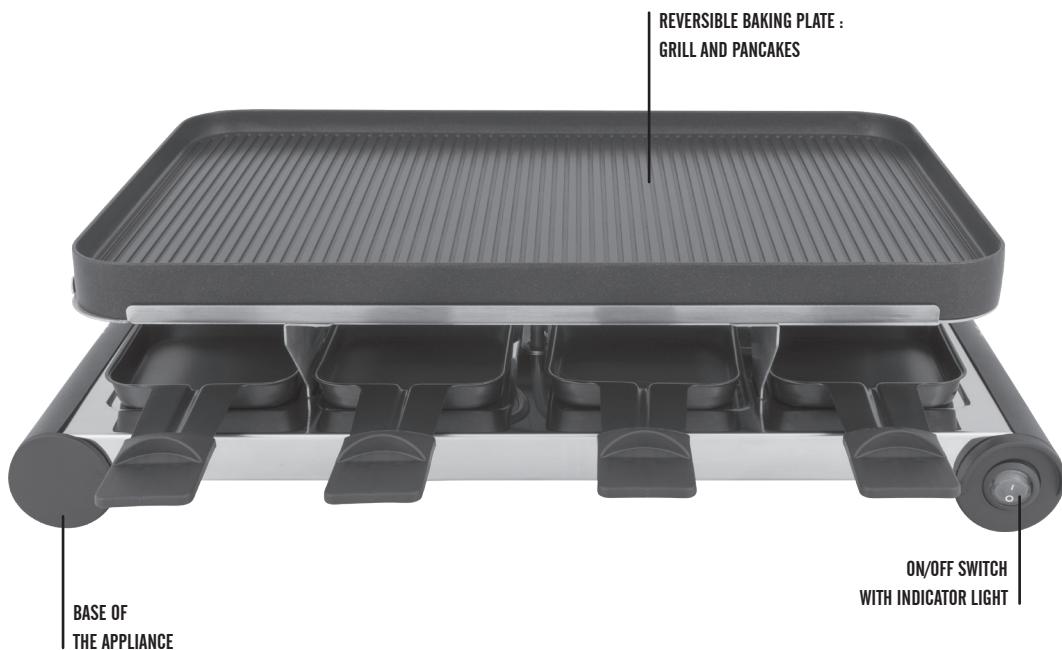

PUTTING INTO SERVISE AND USE

EN



Before the first use

- Check all parts and accessories are included and without faults
- Remove all packaging material from the appliance
- Carefully clean the appliance and the pans (see the section Maintenance)
- Put a thin layer of vegetable oil in the pans and on the plate for grill and pancakes. This will prevent food from sticking and make cleaning afterwards easier
- Upon first use, there might be a slight odor or smoke output. This is normal and without danger
- Therefore, before the first use, let the appliance heat for about 10-15 minutes to remove possible residues

Use of the raclette 3 in 1

- Place the appliance in the middle of the table, on a heat resistant surface and make sure there is sufficient ventilation around the appliance. Never place the appliance on an untreated wooden surface
- Turn the appliance on by means of the on/off switch (n°4) and let the appliance heat for at least 10 minutes
- Raclette: only use the handles of the pans to move them and do not let the pans heat while empty
- Grill-pancake plate :
 - Only use wooden or plastic kitchen utensils in order not to damage the non-stick coating of the reversible baking plate
 - It is a reversible baking plate, therefore, you can choose the side you would like to use, depending on your needs. The grill side is for meat, fish and vegetables. The flat side is ideal for eggs or pancakes

Maintenance

- Always turn off the appliance and pull the plug from the socket before disassembling and cleaning it
- Let the appliance cool down entirely before moving it
- Never immerse the appliance in water, and never put it in the dishwasher
- All external surfaces can be cleaned with a soft cloth or a sponge
- The reversible baking plate and the pans can be cleaned with water and a gentle detergent
- Never use abrasive or aggressive detergents nor sharp tools, only a wooden spatula. This could damage the non-stick coating of the reversible baking plate and pans
- The reversible baking plates and pans are dishwasher proof
- Do not clean the heating element. If it is really dirty, wait until it has completely cooled down and clean it with a dry cloth



Information

- For your safety this appliance has been built in accordance with the European CE safety standards and is compliant with the general recognized standards and prescriptions with regard to the safety of electrical appliances. As for all electrical appliance, the necessary precautions need to be taken in order to avoid accidents or damages
- Participons Let's participate in the protection of the environment! Electrical appliances cannot in any way be disposed in a public waste bin or with normal domestic waste, but they must be brought to an official collection center for recycling of electric and electronic appliances

For more information on the collection centers for recycling of appliances at the end of their lifetime, please contact the local authorities in your area, the household waste disposal service provider or the store where you bought your appliance

Warranty

Dalcq S.A. provides a special warranty on all parts of the appliance subject to conditions below. The legal regulations about warranty as well as the rights resulting from the legislation about responsibility of the defective products remain unaffected. Possible right to reimbursement of the buyer in case the defaults remain valid, if the conditions below are met.

1. Period of the warranty

The warranty applies to all parts of the appliance and starts from the date of purchase (date of invoice) of the appliance and has a duration of 2 years when used privately

2. Object of the warranty

Dalcq S.A. covers the material, construction and manufacturing defaults, provided the default was present at delivery and that the appliance was correctly operated by the buyer. The warranty covers free of charge repair, or exchange of one or more defective components, or the exchange of the appliance for another appliance of the same value. It is up to Dalcq S.A. to decide which measure to undertake.

3. Warranty case

When breakdown/default, you must immediately advise :

- The store where you bought the appliance
- The after sales service (written or via email) that the appliance will be returned, to provide an extended description of the problem with pictures

4. Packaging

It is recommended to use the original packaging to return the appliance. If you use a different packaging, make sure it provides enough protection for typical transport risks and that it offers sufficient protection. A simple cardboard box filled with paper is not sufficient. Dalcq S.A. cannot be held responsible for damage resulting from insufficient packaging. The warranty then expires. The after sales service will inform you of the return procedure as well as of the costs this implies.

5. Cleaning

If you don't clean the parts or the appliance before returning it, Dalcq S.A. will invoice a cleaning set rate. It is the responsibility of the buyer to prove the real costs of cleaning are inferior to the invoiced set rate.

6. Withdrawal of the right to warranty

The right to warranty is withdrawn by:

- Incorrect use, treatment and storage.
(for example, defaults caused by humidity, high temperatures)
- Repairs, repair attempts, modifications of any kind and use of non-original parts, etc. which were not executed by Dalcq S.A. or by an authorized company
- Insufficient packaging and bad transport
- Inappropriate mechanical influences on the appliance or on the parts of the appliance
- Defaults that are not caused by the finishing or production of the appliance, such as fall, collision, damage, fire, earthquake, damage by flood, lightning, etc
- Use other than household use, especially in a commercial environment
- The costs incurred by Dalcq S.A. because of the returning of the appliance by the buyer, without warranty or right to restitution will be for the buyer

7. After sales service

Dalcq S.A. - Rue du Hainaut 86

6180 Courcelles - Belgium

support@dalcq.com

frifri.BE